



A1	LH Receiver Plate Semi	F5	Bolt Lock	J8	Plunger
A2	RH Receiver Plate Semi	F6	Bolt Lock Pin	J9	Semi Plunger Spring
A3	Receiver Plate Spacer	F7	Bolt Lock Spring	J10	Plunger Set Screw
A4	Receiver Plate Rivet	F8	Bolt Lock Shim	J11	Hammer Semi
A5	Receiver Plate Screw	F9	Bolt Lock Screw	J12	Hammer Spring
A6	Short Receiver Screw	G1-1	.45 ACP Bolt	J13	Primary Sear Spring
B1-1	.45 ACP Barrel	G1-2	9mm Bolt	J14	FCG Spacer LH
B1-2	9x19mm Barrel	G2-1	.45 ACP Firing Pin	J15	FCG Spacer RH
B1-3	9x21mm Barrel	G2-2	9mm Firing Pin	J16	Hammer Spacer
B2	Trunnion	G3	Firing Pin Spring	K1	Pivoting Trigger
B3	Barrel Pin	G4	Firing pin Retaining Pin	K2	Pivoting Primary Sear
B5-1	.45 ACP Thread Protector	G5-1	.45 ACP Extractor	K3	Trigger Spring Stop Screw
B5-2	9mm Thread Protector	G5-2	9mm Extractor	K4	Pivoting Trigger Spacer LH
C1-1	.45 ACP Ejector Mount	G6	Extractor Spring	K5	Pivoting Trigger Spacer RH
C1-2	9mm Ejector Mount	G7	Extractor Pin	K6	Trigger Sear Connector Pin
C2-1	.45 ACP Ejector	H1-1	.45 ACP Slider	L1	M4 Stock Adapter
C2-2	9mm Ejector	H1-2	9mm Slider	L2	Buffer Tube
C3	Ejector Pin	H2	Buffer	L3	Castle Nut
C1-1	.45 ACP Ejector Mount	H3-1	.45 ACP Main Spring	L4	Locking Screw
C1-2	9mm Ejector Mount	H3-2	9mm Main Spring	L5	Stock Body
C2-1	.45 ACP Ejector	H4	Main Guide Shaft	L6	Buttpad
C2-2	9mm Ejector	H5	Spring Washer	L7	Front Block
C3	Ejector Pin	H6	Main Guide Shaft Screw	L8	Latch
D1	Charging Slider	H7	Spring Plate	L9	Sling Loop
D2	Charging Handle	H8	Main Guide Rod Retainer Pin	L10	Bottom Plate
D3	Charging Slider Spring	I1	Upper Housing	L11	Spring Support
D4	Charging Handle Spring	I2	Nose Piece	L12	Lock Pin
D5	Charging Handle Pivot Pin	I3-1	.45 ACP Ejection Port	L13	QD1
D6	Charging Slider Spring Retainer	I3-2	9mm Ejection Port	L14	QD2
E1-1	.45 ACP Lower Housing	I4	Locking Key	L15	Latch Spring
E1-2	9mm Lower Housing	I5	FCG Screw	L16	Latch Pin
E2	Magazine Catch	I6	Upper Picatinny Rail	L17	QD Screw
E3	Magazine Catch Spring	I7	Nose Piece Screw		
E4	Magazine Catch Button	I8	Safety Lever LH		
E5	Magazine Catch Screw	I9	Safety Lever RH		
E6	Charging Handle Spring Post	I10	Safety Lever Screw		
E7	Lower Picatinny Rail	J1	Fire Control Group Frame Semi		
E8	Rail Pin	J2	Large Dowel Pin		
E9	Break Down Pin	J3	Small Dowel Pin		
F1	Bolt Lock Trigger	J4	Safety Cam		
F2	Bolt Lock Trigger Pin	J5	Safety Stop Bar		
F3	E-Clip	J6	Safety Stop Bar Screw		
F4	Bolt Catch Block	J7	Semi Disconnect		