



A3	Receiver Plate Spacer	F6	Bolt Lock Pin	M3	Stock Latch Spring
A4	Receiver Plate Rivet	F7	Bolt Lock Spring	M4	Stock Latch Pin
A5	Receiver Plate Screw	F8	Bolt Lock Shim	M5	Butt Stock
A6	Short Receiver Screw	F9	Bolt Lock Screw	M6	Cheek Weld
B1-1	.45 ACP Barrel	G1-1	.45 ACP Bolt	M7	Butt Stock Screw
B1-2	9x19mm Barrel	G1-2	9mm Bolt	N1	LH Receiver Plate SMG
B1-3	9x21mm Barrel	G2-1	.45 ACP Firing Pin	N2	RH Receiver Plate SMG
B2	Trunnion	G2-2	9mm Firing Pin	N3	Upper Housing SMG
B3	Barrel Pin	G3	Firing Pin Spring	N4	Selector Lever LH
B5-1	.45 ACP Thread Protector	G4	Firing pin Retaining Pin	N5	Selector Lever RH
B5-2	9mm Thread Protector	G5-1	.45 ACP Extractor	O1	Fire Control Group Frame SMG
C1-1	.45 ACP Ejector Mount	G5-2	9mm Extractor	O2	Large Dowel Pin
C1-2	9mm Ejector Mount	G6	Extractor Spring	O3	Small Dowel Pin
C2-1	.45 ACP Ejector	G7	Extractor Pin	O4	Safety Cam
C2-2	9mm Ejector	H1-1	.45 ACP Slider	O5	Safety Stop Bar
C3	Ejector Pin	H1-2	9mm Slider	O6	Safety Stop Bar Screw
C1-1	.45 ACP Ejector Mount	H2	Buffer	O7	Semi Disconnect
C1-2	9mm Ejector Mount	H3-1	.45 ACP Main Spring	O8	Burst Disconnect
C2-1	.45 ACP Ejector	H3-2	9mm Main Spring	O9	Auto Sear
C2-2	9mm Ejector	H4	Main Guide Shaft	O10	Plunger
C3	Ejector Pin	H5	Spring Washer	O11	Semi Plunger Spring
D1	Charging Slider	H6	Main Guide Shaft Screw	O12	SMG Plunger Spring
D2	Charging Handle	H7	Spring Plate	O13	Plunger Set Screw
D3	Charging Slider Spring	H8	Main Guide Rod Retainer Pin	O14	Hammer SMG
D4	Charging Handle Spring	I2	Nose Piece	O15	Hammer Spring SMG
D5	Charging Handle Pivot Pin	I3-1	.45 ACP Ejection Port	O16	Hammer Spacer SMG
D6	Charging Slider Spring Retainer	I3-2	9mm Ejection Port	O17	Primary Sear Spring
E1-1	.45 ACP Lower Housing	I4	Locking Key	O18	SMG FCG Spacer LH
E1-2	9mm Lower Housing	I5	FCG Screw	O19	SMG FCG Spacer RH
E2	Magazine Catch	I6	Upper Picatinny Rail	O20	Selector Cam
E3	Magazine Catch Spring	I7	Nose Piece Screw	O21	Selector Spring
E4	Magazine Catch Button	I8	Safety Lever LH	O22	Selector Screw
E5	Magazine Catch Screw	I9	Safety Lever RH	O23	Burst Cam
E6	Charging Handle Spring Post	I10	Safety Lever Screw		
E7	Lower Picatinny Rail	K1	Pivoting Trigger		
E8	Rail Pin	K2	Pivoting Primary Sear		
E9	Break Down Pin	K3	Trigger Spring Stop Screw		
F1	Bolt Lock Trigger	K4	Pivoting Trigger Spacer LH		
F2	Bolt Lock Trigger Pin	K5	Pivoting Trigger Spacer RH		
F3	E-Clip	K6	Trigger Sear Connector Pin		
F4	Bolt Catch Block	M1	Folding Stock		
F5	Bolt Lock	M2	Stock Latch		